



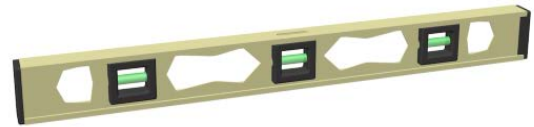


Tools Required





Dig hole 30" depth with 70 7/8" spacing.



Min post must be 18".

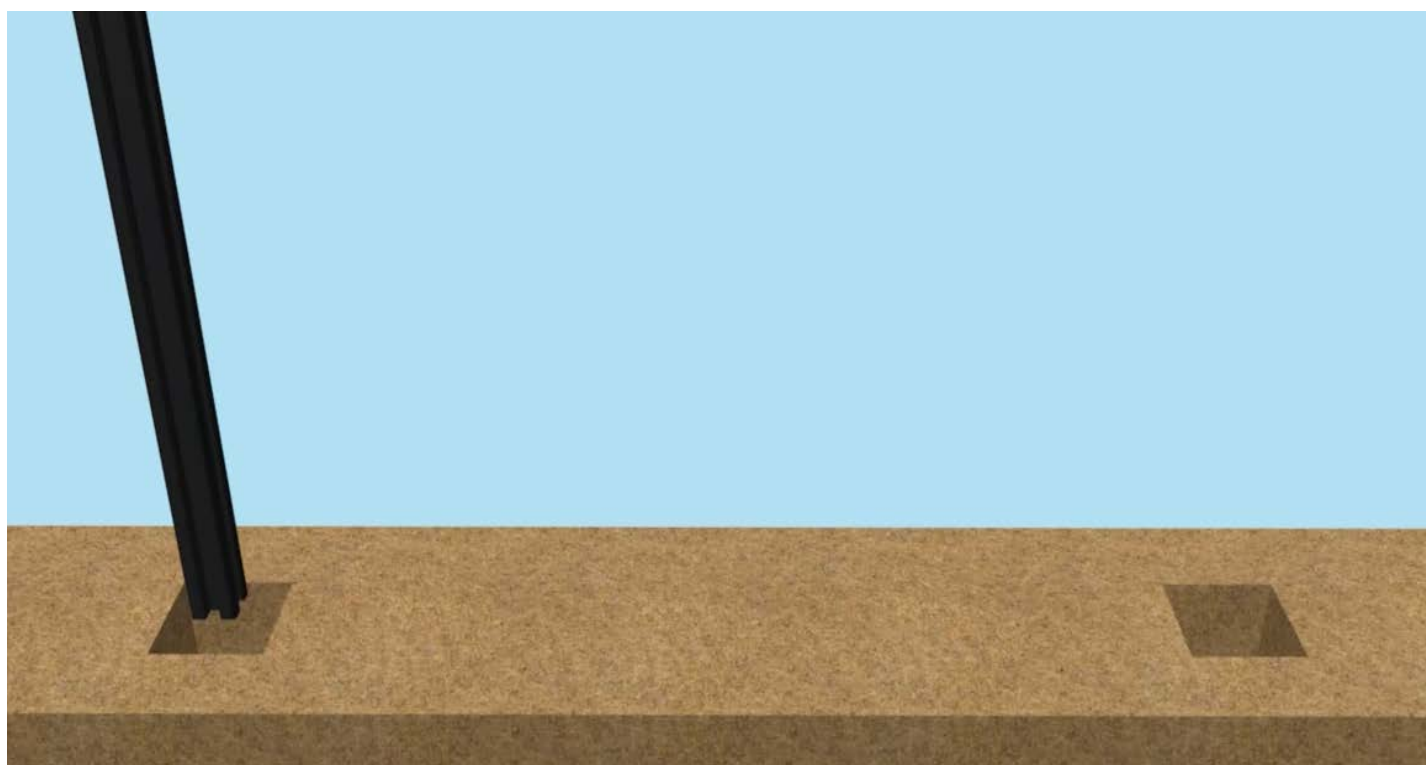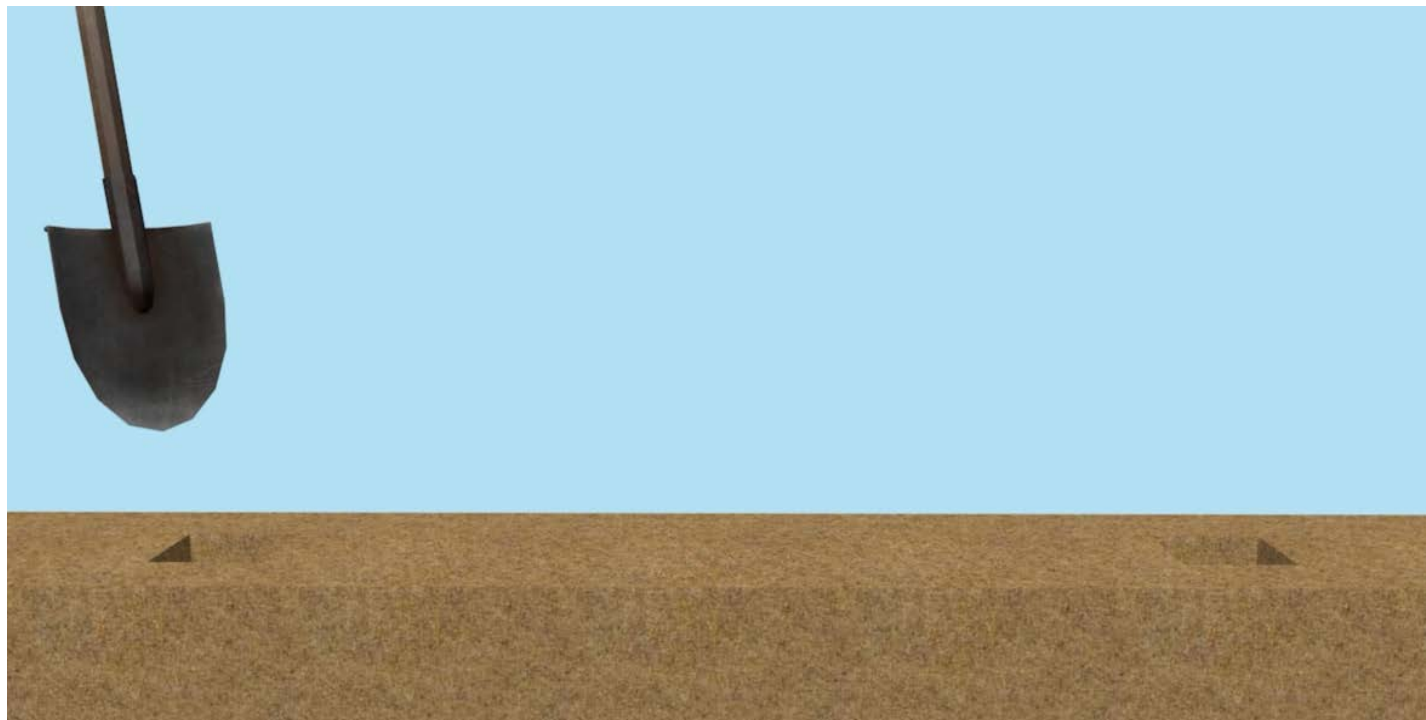




Fill the holes with concrete

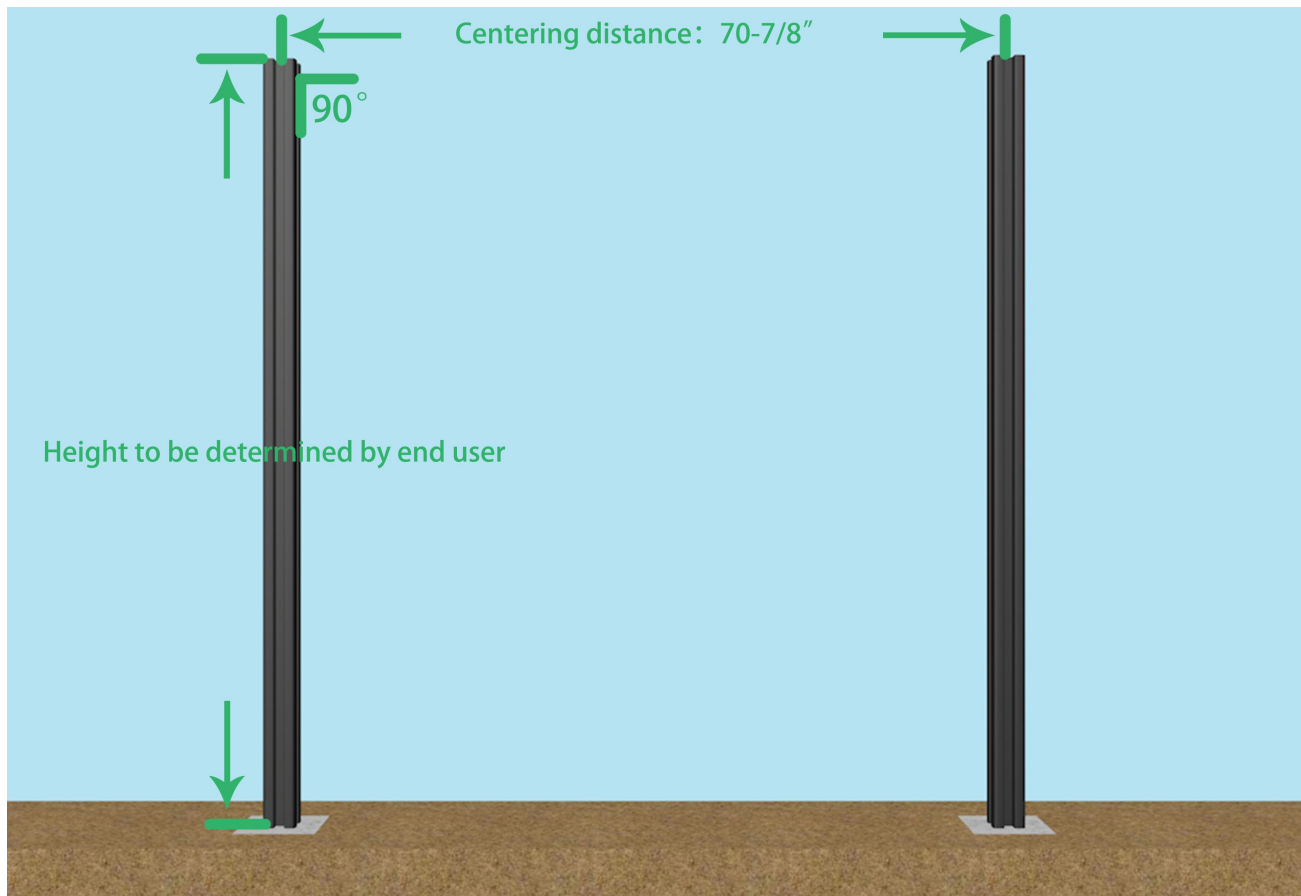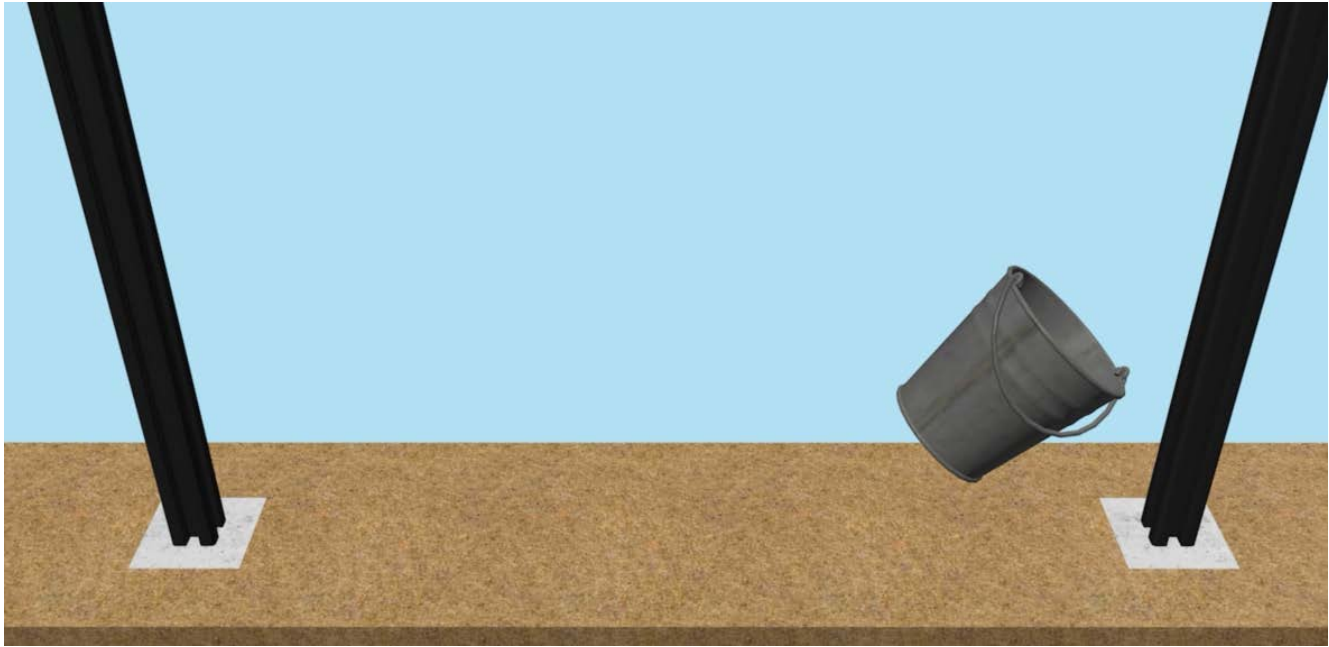


Insert L support bracket

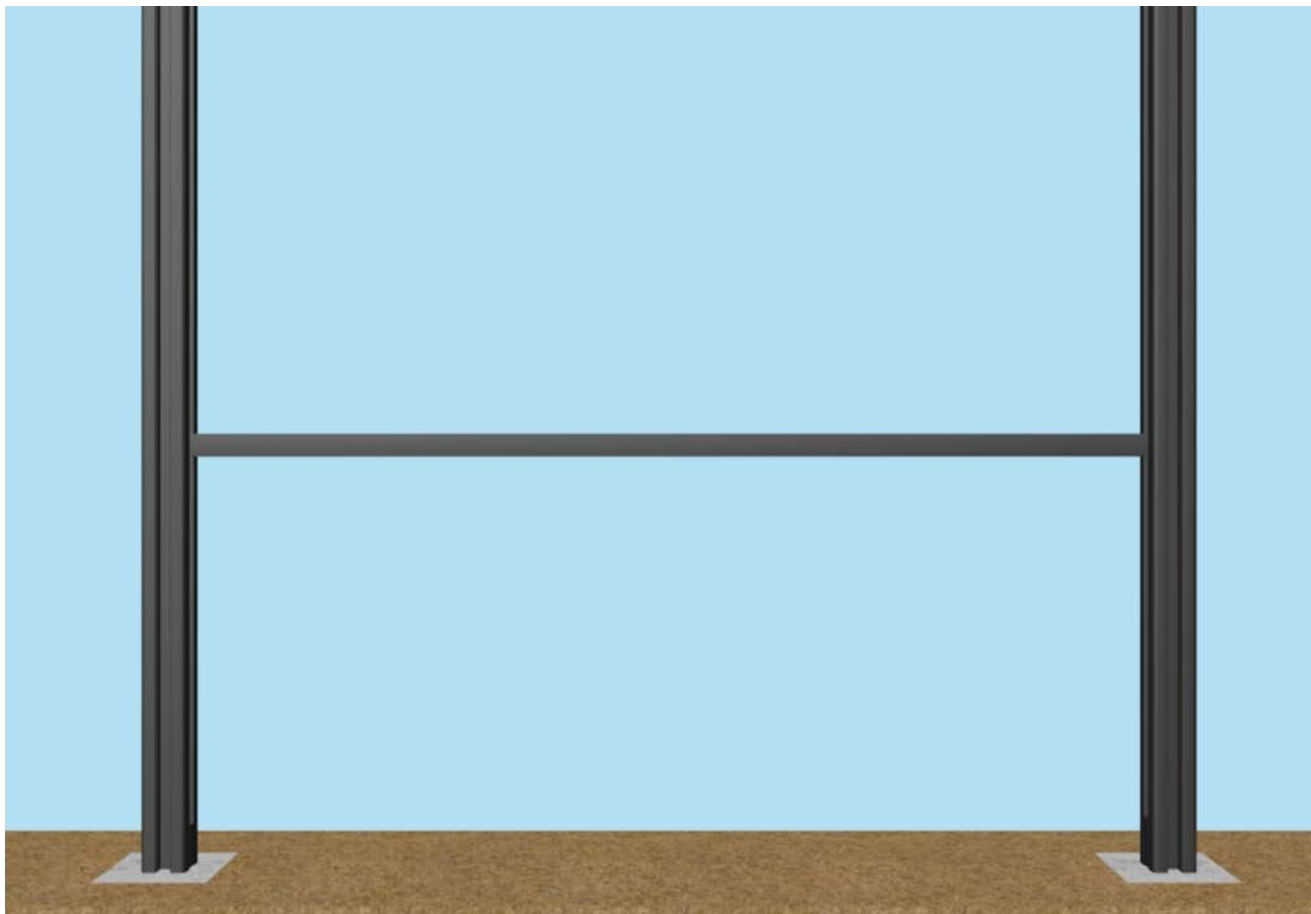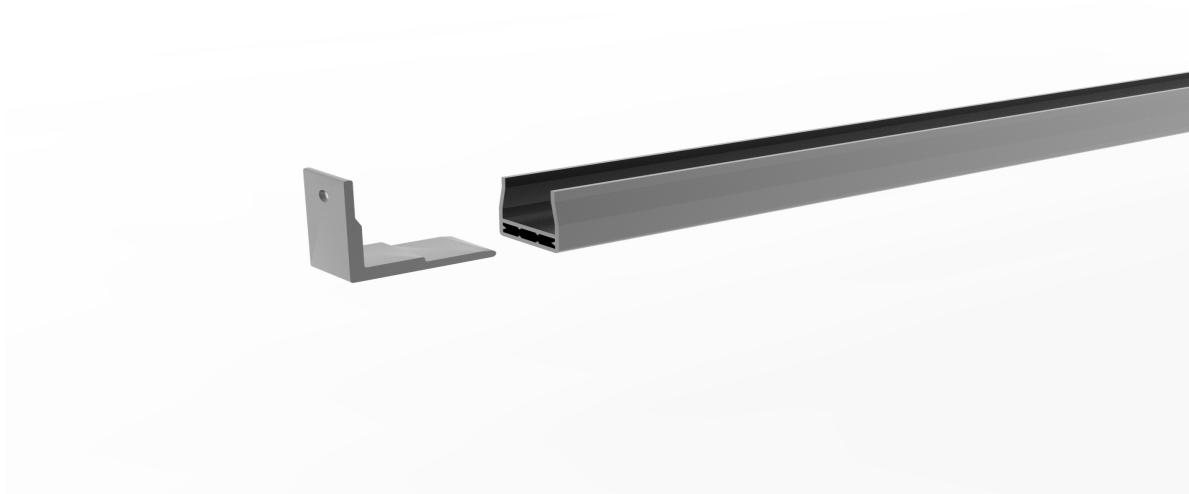




Install the bottom rail

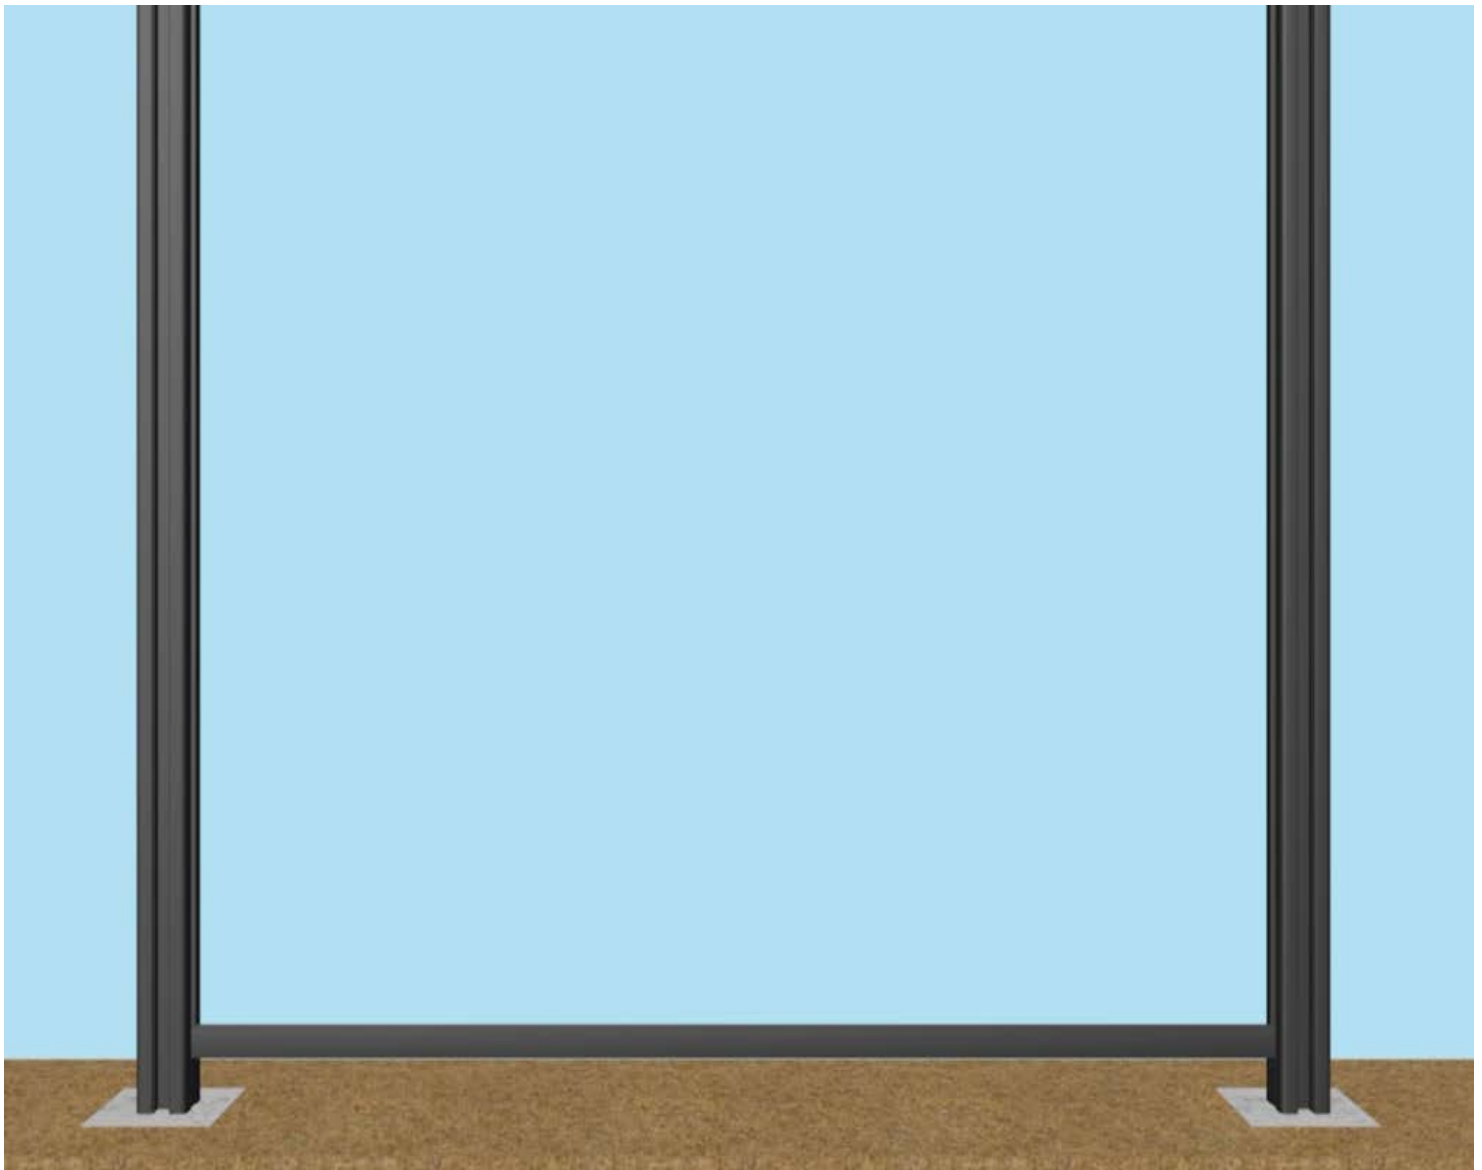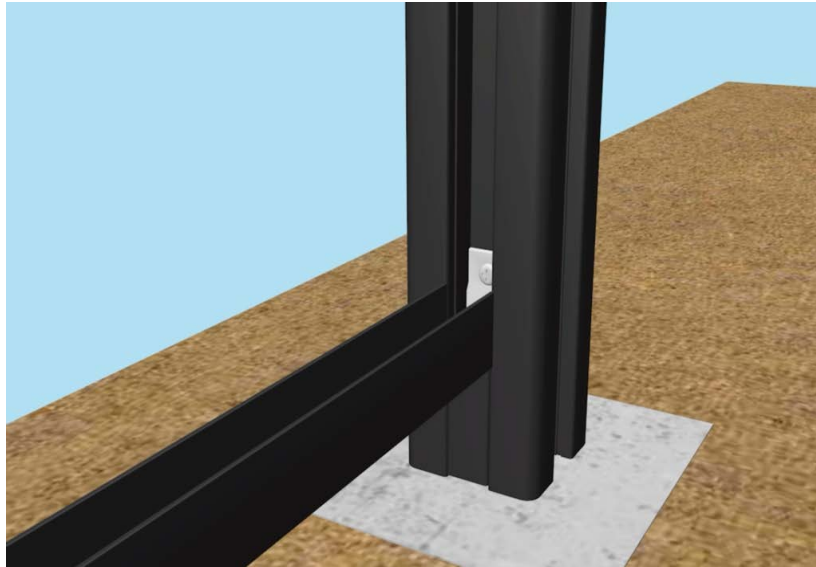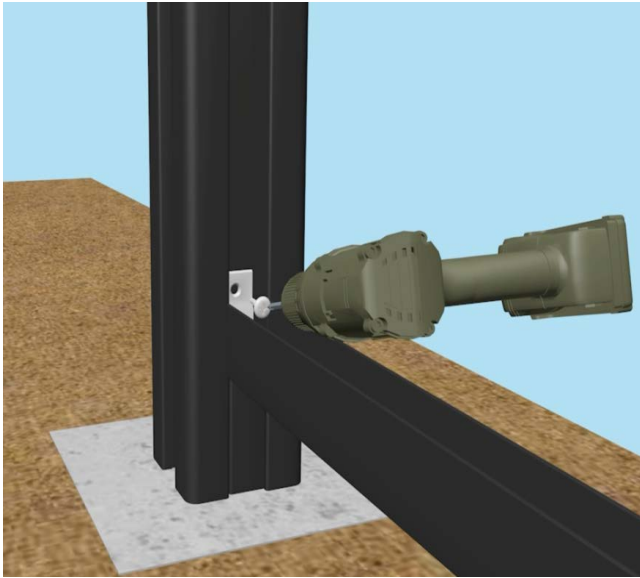



Install MFP01

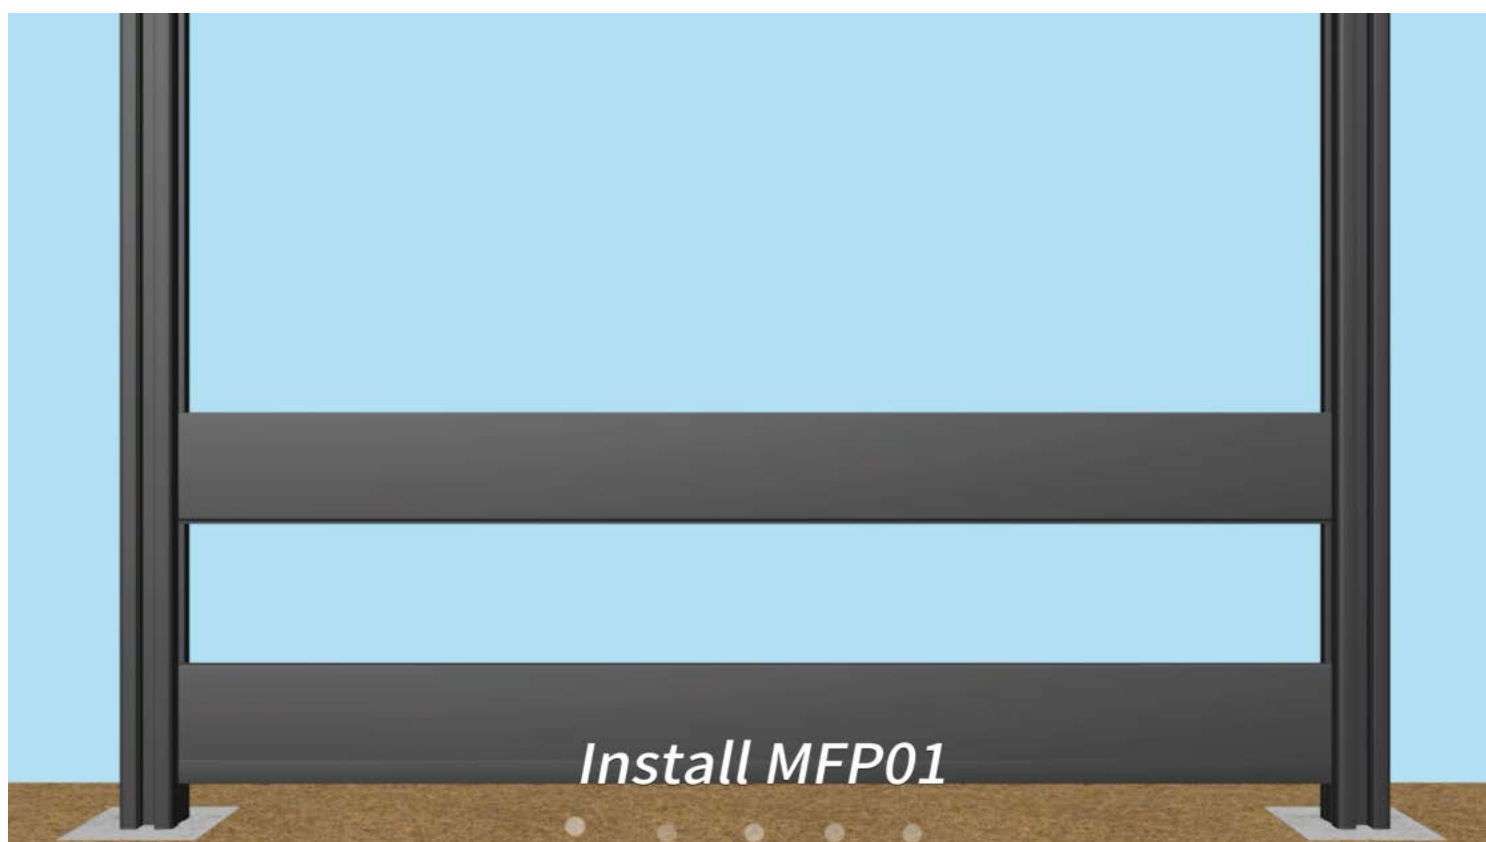

Install the spacers and side cover spacers, and MFP02

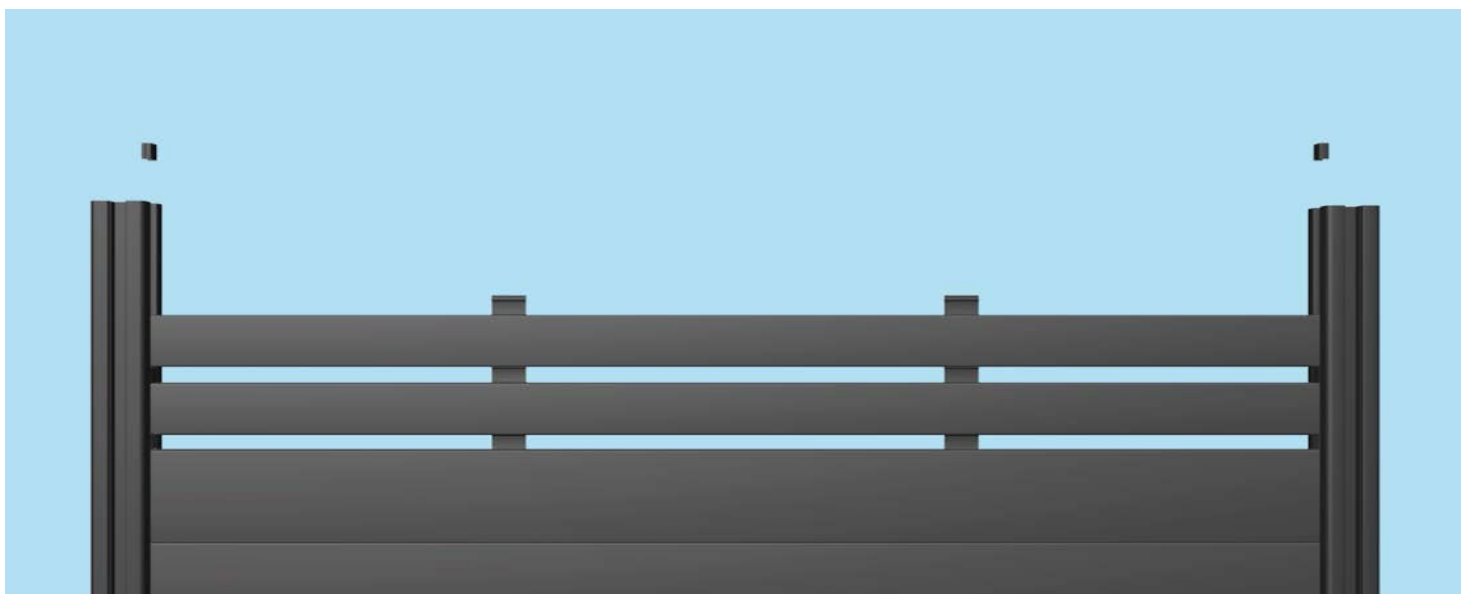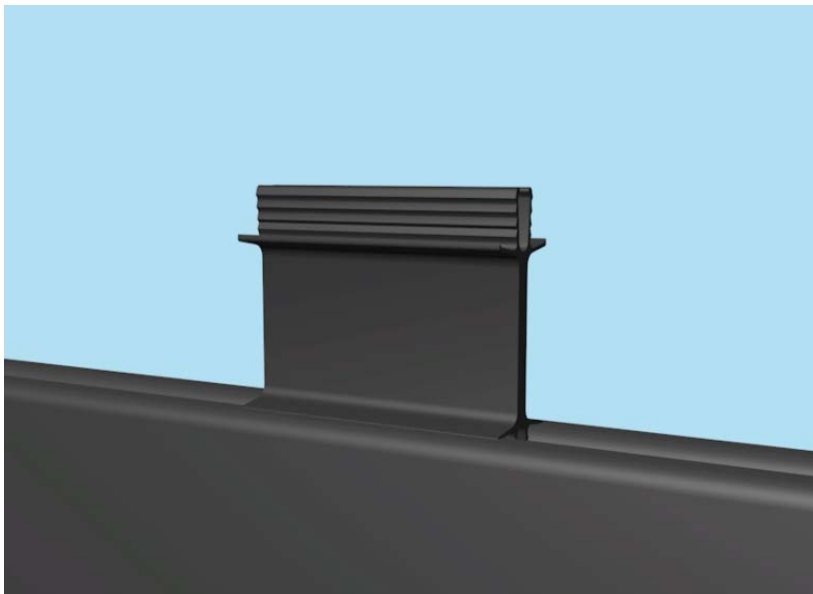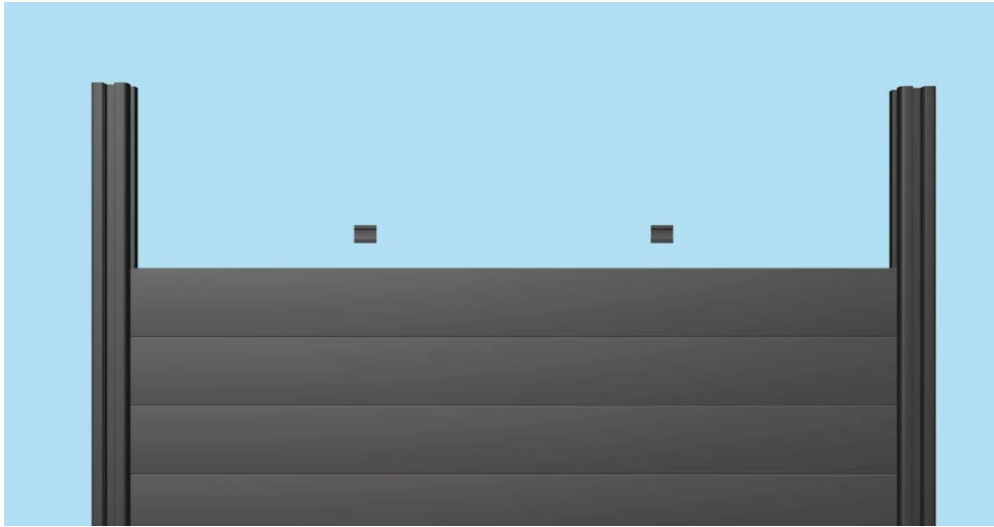

Insert the L support bracket into the top rail

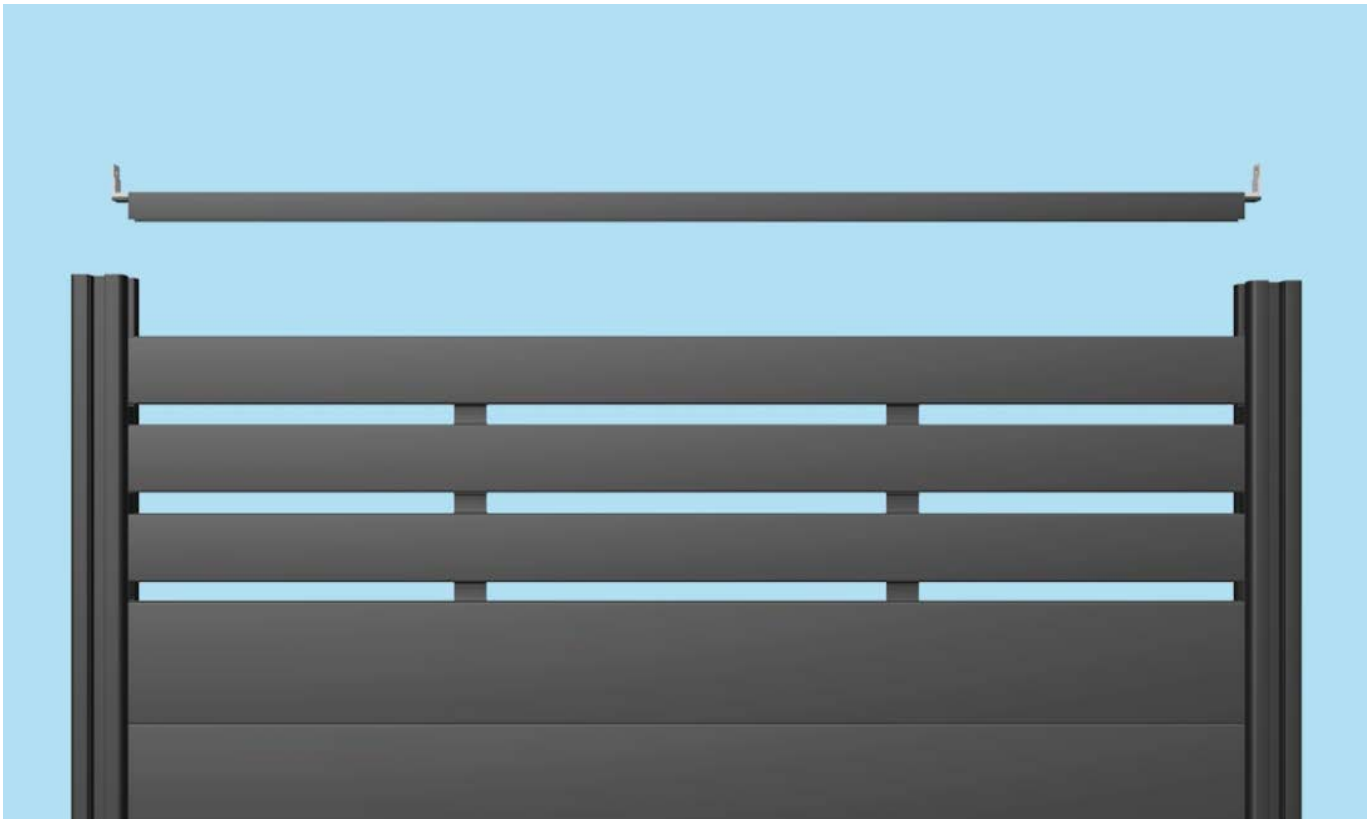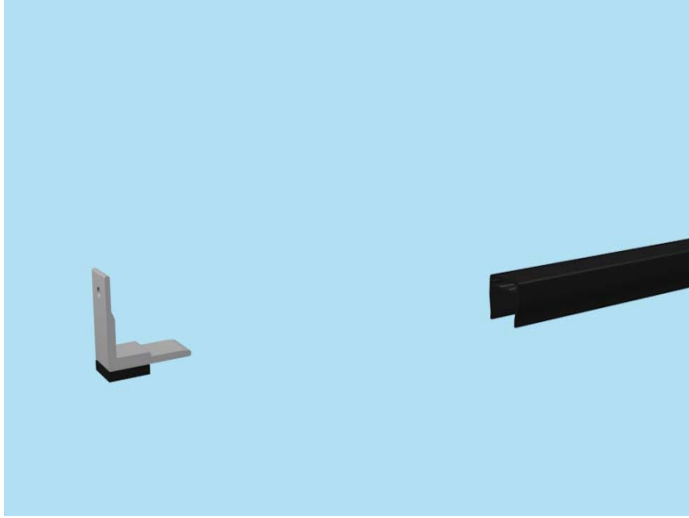

Install post side cover and cap

